


# USB VoIP Phone User Manual for X-Lite/EyeBeam


## 1. Install and run X-Lite/EyeBeam

- Make sure to exit any software applications that use sound, such as CD and media players.
- Run the X-Lite/X-PRO install program. (X-Lite is available for free downloaded from <http://xten.com/lite.php>)
- Follow the instructions at each step, progressing through the InstallShield Wizard until the installation is complete.
- Double click the icon  on the desktop to start the software.

## 2. Connect USB VoIP Phone to PC

Connect USB VoIP Phone to PC, the LCD shows “VOIP -PHONE”.

## 3. Install and run X-TenMate

- Insert the installation CD into CD-ROM or download the software.
- Run the X-TenMate install program.
- Double click the icon  on the desktop to start the software.

## 4. Keypad Instruction




### ◀(or IN): Redial

Call out the last phone number


### ▶(or OUT):Auto complete number to dial.

Example:

If you called a number 123456 one time, the second time when you press “1”, the full number will appear on the window of the softphone (picture 1), press “▶(or OUT)” to get the full number (picture 2), then press  key to call out.



1

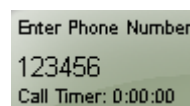

2

▲/▼: Adjust the speaker volume.

### : Dial/Answer

Call out number or Answer a call.


### : Hang up

End talking or refuse incoming call.

## C: Delete Key

- Delete inputted wrong number while dialing.

## 5. Make a call

Enter phone number and then press  to call out.

## 6. Answer a call

The phone will ring for all incoming calls, press  to answer, or press  to refuse it.